





101-043

## Quick Guide

101-043

**STAND-ALONE SINGLE DOOR SYSTEM**

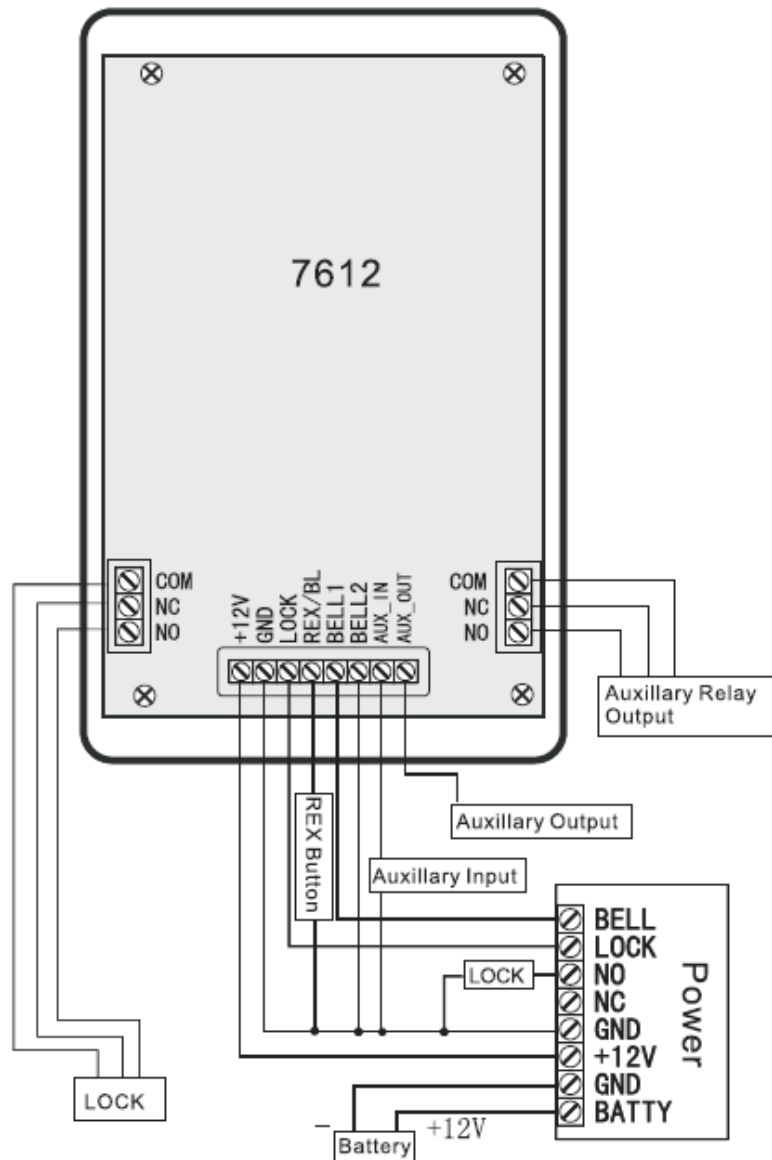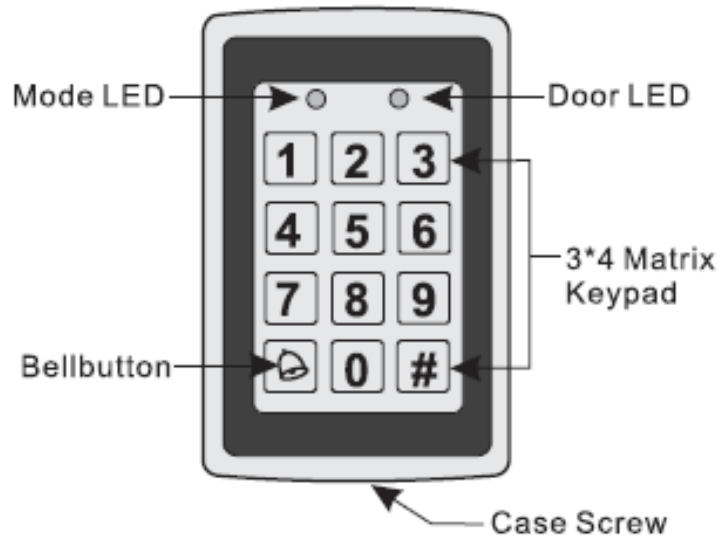

### Enter Program mode

**Note:** Press # for 2 seconds  
You need to be in Normal mode first Enter your 4-digit installer code (Default: 1234)

Mode LED should be green

**Factory Default:**  
1234

### Exit Program mode

Press # for 2 seconds

### Enter / Exit Secure mode

**Factory Default:** Enter your Secure code  
3838

Press #

*Mode LED:*  
*Green = Not in secure mode*  
*Red = In Secure Mode*

### Set a new open code

**Factory Default:** Enter Program Mode  
2580

Press 1

Enter your new 4-Digit open code

### Set a new Aux code

**Factory Default:** Enter Program Mode  
0852

Press 2

Enter your new 4-Digit Aux code

### Set a new Program code

Enter Program Mode

Press 3

Enter your new 4-Digit Installer code

### Set a new unlock time

**Factory Default:** Enter Program Mode  
0005 Seconds

Press 6

Enter your new 4-Digit number

- First Digit – (fail safe or fail secure lock)
  - 0 = fail safe lock
  - 1 = fail secure locks
- Second Digit – (Tamper siren time)  
Tamper siren time (1-9 mins)
- Third and fourth digit – (lock activation time)
  - 01 = 1 second
  - 99 = 99 seconds

*Example:*

*If we want to set the lock activation time for 12 seconds and work with fail secure lock and with 5 seconds tamper siren time then we would set the 4 digits number to 1512.*

#### Add a new code

**Factory Default:** Enter Program Mode  
none

Press 7

Enter user number ( 001 – 500 )

Present Card or Enter 4-digits

#### Delete a code

**Factory Default:** Enter Program Mode  
none

Press 8

Enter user number ( 001 – 500 )

Enter Installer code to confirm (default: 1234)

#### Factory Default Settings

**Factory Default:** **Warning: This will erase the entire memory and settings including user codes.**  
none

Enter Program Mode

Press 0

Enter Program code to confirm (default: 1234)

#### Replace a lost installer code

**Factory Default:** Remove power from the unit  
none

Press the REX button (or short out REX/BL and GND)

Power the unit up

Release the REX button

You have 15 seconds to program a new installer code into the unit