



### **Cheat Sheet for the Basic Functions of the Rosslare AC-Q4x Series of Keypads**

*Codes based on Factory Default Program Code Setting of 1 2 3 4*

#### **Changing the Open Code - Default is 2580**

Press #, #, 1, 2, 3, 4, 1, (New Code)

#### **Changing the Aux Code - Default is 0852**

Press #, #, 1, 2, 3, 4, 2, (New Code)

#### **Enrolling Codes into Memory Slots**

Press #, #, 1, 2, 3, 4, 7, x, x, x, (New Code) - (xxx = Memory Location 001-500)

*Press # to enter next memory slot or #, #, to exit*

#### **Deleting Codes from Memory Slots**

Press #, #, 1, 2, 3, 4, 8, x, x, x, (xxx = Memory Location 001-500) 1, 2, 3, 4

#### **Relay Code Assignment**

Strike Only Press #, #, 1, 2, 3, 4, x, x, x, (xxx= Memory Location 001-500), 1 - *Default for Enrolled Codes*

Aux Output Only Press #, #, 1, 2, 3, 4, x, x, x, (xxx= Memory Location 001-500), 2

Lock Strike & Aux Press #, #, 1, 2, 3, 4, x, x, x, (xxx= Memory Location 001-500), 3

*Press # to enter next memory slot or #, #, to exit*

#### **Setting Failsafe/Secure Operation & Strike Time**

Failsecure Press #, #, 1, 2, 3, 4, 6, 0, 0, x, x ( xx = Strike Time in Seconds 01 - 99 )

Failsafe Press #, #, 1, 2, 3, 4, 6, 1, 0, x, x ( xx = Strike Time in Seconds 01-99)

#### **Aux Output Time**

Press #, #, 1, 2, 3, 4, 6, 2, 0, x, x, (xx = Output Time in Seconds 01 - 99)

#### **Changing the Programming Code - Default is 1234**

Press #, #, 1, 2, 3, 4, 3, (New Code)



Pin Code Length / Factory Default Settings - **Note Erases All Stored Settings / Memories back to Default**

Press #, #, 1, 2, 3, 4, 0, 0 - Returns to Factory Default and sets a 4 Digit Code

Press #, #, 1, 2, 3, 4, 0, 5 - Returns to Factory Default and sets a 5 Digit Code

Press #, #, 1, 2, 3, 4, 0, 6 - Returns to Factory Default and sets a 6 Digit Code

Press #, #, 1, 2, 3, 4, 0, 8 - Returns to Factory Default and sets a 4 - 8 Digit Code

Replacing a Lost Program Code

Remove Power from the Controller

Depress and Hold the REX1 Push Button

Apply Power to the Controller with the REX1 Button Depressed

Release the REX1 Button

Press #, #, 1, 2, 3, 4, 3, (New Code)

Backlight & LED Behavior

Press #, #, 1, 2, 3, 4, 6, 5, 0, 0, 0 - LED Active / Backlight Off

Press #, #, 1, 2, 3, 4, 6, 5, 1, 0, 0 - LED Active / Backlight On

Press #, #, 1, 2, 3, 4, 6, 5, 2, 0, 0 - LED & Backlight Off - Activated on Key Press for 10 Seconds

Press #, #, 1, 2, 3, 4, 6, 5, 3, 0, 0 - LED Active / Backlight Dimmed, & Activated on Key Press for 10 Seconds

Keypad Heater Operation - Default is Off

Heater is needed in applications of less than 4 Degrees Celcius

To Disable Press #, #, 1, 2, 3, 4, 6, 3, 0, 0, 0

To Enable Press #, #, 1, 2, 3, 4, 6, 3, 0, 0, 1

Wiring Colour Guide

Red - Voltage Input 12 - 24V DC or 16 - 24V AC

Black - Ground

Green - REX 1

White - REX 2

Purple - LOCK COM

Gray - LOCK NO

Brown - LOCK NC

Blue - AUX COM

Yellow - AUX NO

Orange - AUX NO

Black – Shield