

1. LAN Converter Setup

- ① Connection via RS422 will require the following Piano Switch setup as shown below.



Switch No.	Switch Status
1	OFF (Up)
2	On (Down)
3	OFF (Up)
4	On (Down)
5	OFF (Up)
6	On (Down)

- ② Connection via RS232 will require the following Piano Switch setup as shown below.




Switch No.	Switch Status
1	OFF (Down)
2	On (Up)
3	OFF (Down)
4	On (Up)
5	OFF (Down)
6	On (Up)

Note

- 👉 If you have STARWATCH software, configuration software for setup ILAN422/485 is included.
- 👉 If not, download configuration software for setup ILAN422/485 at **DOWNLOAD CENTER** from website (www.idteck.com).


2. Connect RS232 Converter to 505R / FINGER007.

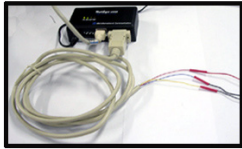


CONVERTER



505R / FINGER007

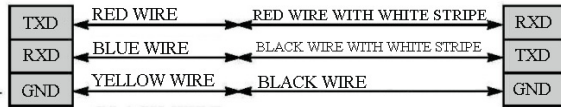


3. Connect RS422 Converter to 505R / FINGER007.

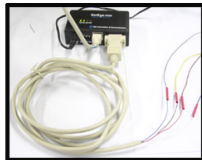


CONVERTER



505R / FINGER007

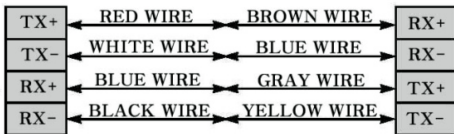


4. Connect RS232 Converter to iCON100/iTDC.

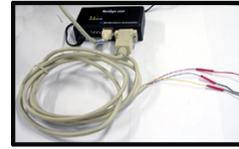


CONVERTER



iCON100 / iTDC

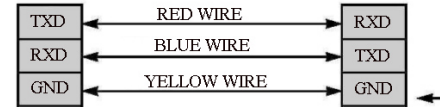

5. Connect RS422 Converter to iCON100/iTDC.

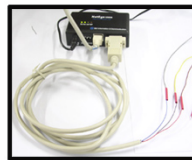

CONVERTER



iCON100 / iTDC

