



Cheat Sheet for the Basic Functions of the Rosslare AC-Q54B Series Wiegand Keypad

Codes based on Factory Default Program Setting of 1 2 3 4

Selecting Keypad Transmission Format

1 to 5 Keys + Facility Code, 26-Bit Wiegand Press #, #, #, #, 1, 2, 3, 4, 1, 5

Changing the Facility Code - Default is 0

Press #, #, #, #, 1, 2, 3, 4, 4, x, x, x (xxx = Facility Code 0-255)

Changing the Programming Code - Default is 1234

Press #, #, #, #, 1, 2, 3, 4, 3, (New Code)

Return to Factory Default Settings - **Note** Will Erase All Stored Settings / Memories back to Default

Press #, #, #, #, 1, 2, 3, 4, 0, 1, 2, 3, 4

Replacing a Lost Program Code

Remove Power from the Controller

Activate Tamper

Apply Power to the Keypad

Press #, #, #, #, 1, 2, 3, 4, 3, (New Code)

Wiring Colour Guide

Red - Voltage Input 5 - 16V

DC

Black - Shield / Ground

White - Data 1 / Clock

Green - Data 0 / Data

Brown - LED

Control

Purple - Tamper