
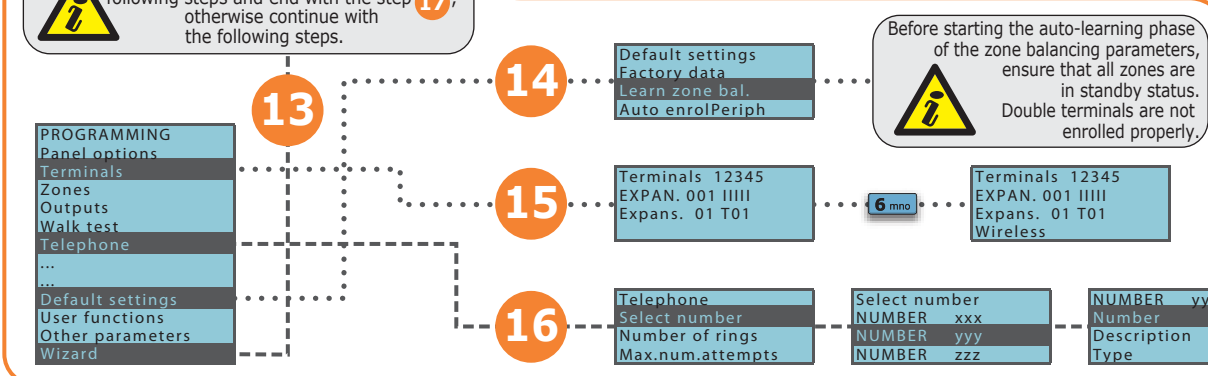
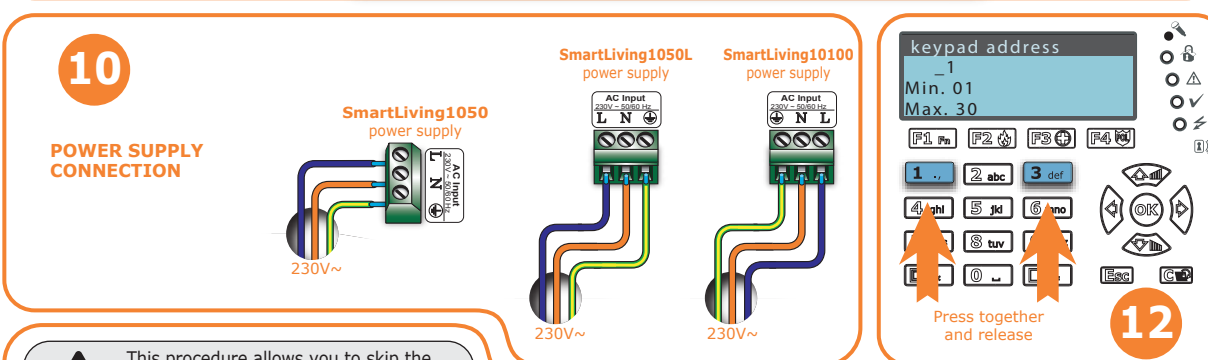
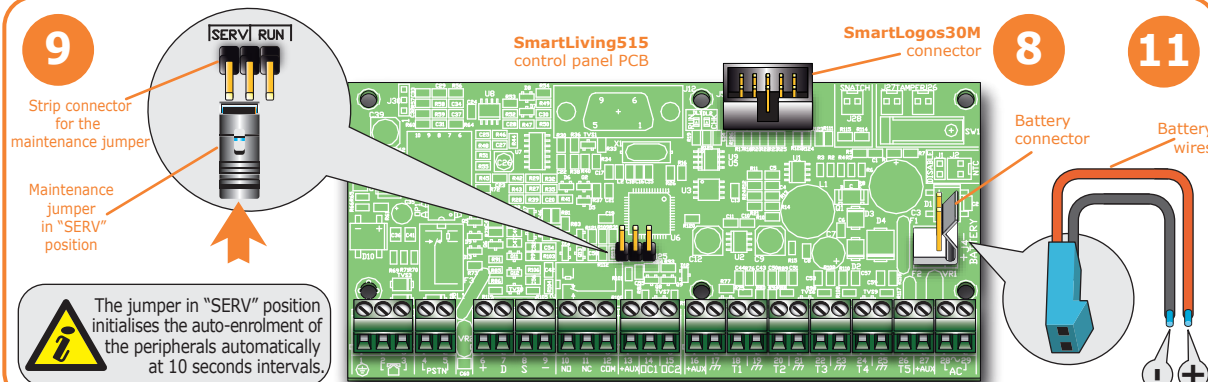
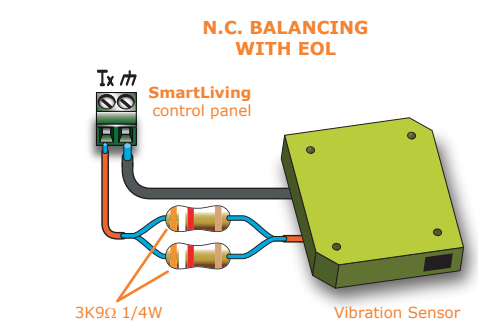
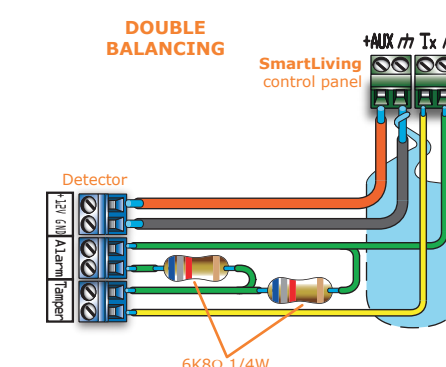
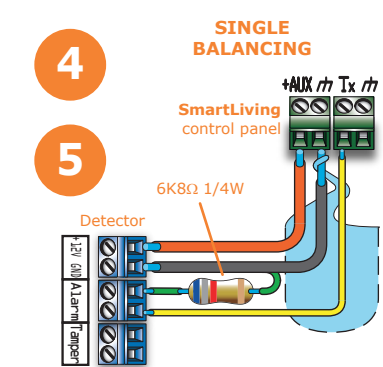
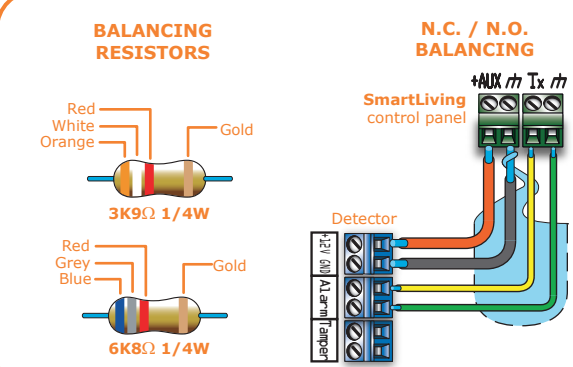
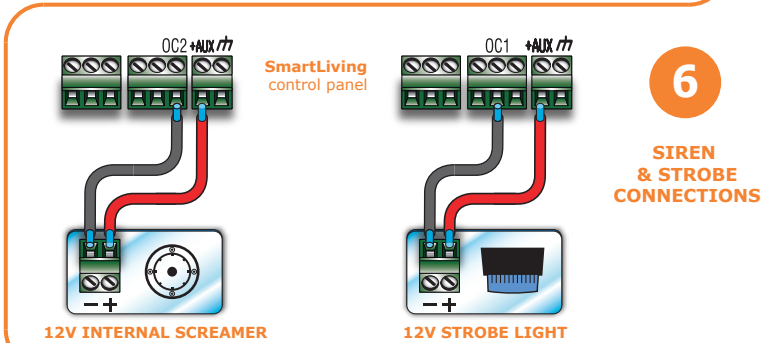


QUICK GUIDE TO FIRST POWER UP

- 1 Attach to the wall the control panel enclosure and the open tamper (optional)
- 2 Connect the peripherals to the BUS.
- 3 Connect the BUS to the control panel.
- 4 Set the balancing parameters of the system detectors.
- 5 Connect the system detectors to the terminals.
- 6 Connect the outputs to the control panel and peripheral terminals.
- 7 Connect the telephone line to the control panel.
- 8 Connect the SmartLogos30M to the motherboard (PCB).
- 9 Insert the maintenance jumper in "SERV" position.
- 10 Connect the primary power source (Mains 230V~ ±10%, 50/60 Hz).
- 11 Connect the backup battery.
- 12 Set the addresses of the peripherals.
- 13 Start the quick programming wizard.
- 14 Acquire automatically the zone balancing via the installer menu.
- 15 Configure "Wireless" terminals.
- 16 Edit the voice and digital dialer contact numbers.
- 17 Insert the maintenance jumper in "RUN" position.

Attention!
Before starting the installation procedure, read carefully through the installation and programming manuals.

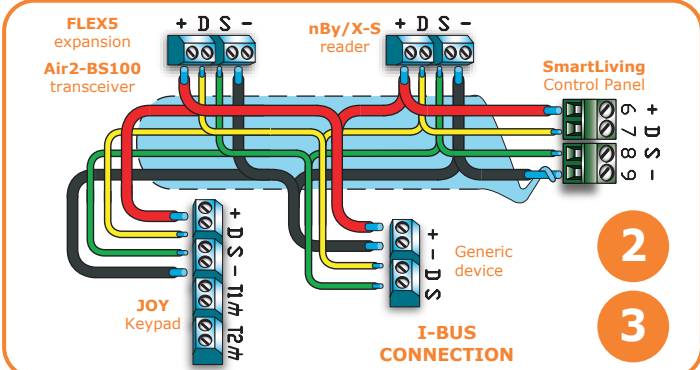

12 During the addressing phase, DO NOT exceed the maximum number of addresses available for the control panel model you are installing.

Expansion - Transceiver address	DIP-switch 12345678	Reader address	Red	Blue	Green	Yellow	nBy/S	nBy/X	Keypad address
1	00000000	1	0	0	0	0	1	0	1
2	00000001	2	0	0	1	0	0	0	2
3	00000010	3	0	0	1	1	0	0	3
4	00000011	4	0	1	0	0	0	0	4
5	00000100	5	0	1	0	1	0	0	5
6	00000101	6	0	1	1	0	0	0	6
7	00000110	7	0	1	1	1	0	0	7
8	00000111	8	1	0	0	0	0	0	8
9	00001000	9	1	0	0	1	0	0	9
10	00001001	10	1	0	1	0	0	0	10
11	00001010	11	1	0	1	1	0	0	11
12	00001011	12	1	1	0	0	0	0	12
13	00001100	13	1	1	0	1	0	0	13
14	00001101	14	1	1	1	0	0	0	14
15	00001110	15	1	1	1	1	0	0	15
16	00001111	16	0	0	0	0	1	0	16
17	00010000	17	0	0	0	1	0	0	17
18	00010001	18	0	0	1	0	0	0	18
19	00010010	19	0	0	1	1	0	0	19
20	00010011	20	0	1	0	0	0	0	20
21	00010100	21	0	1	0	1	0	0	21
22	00010101	22	0	1	1	0	0	0	22
23	00010110	23	0	1	1	1	0	0	23
24	00010111	24	1	0	0	0	0	0	24
25	00011000	25	1	0	0	1	0	0	25
26	00011001	26	1	0	1	0	0	0	26
27	00011010	27	1	0	1	1	0	0	27
28	00011011	28	1	1	0	0	0	0	28
29	00011100	29	1	1	0	1	0	0	29
30	00011101	30	1	1	1	0	0	0	30
31	00011110	31	1	1	1	1	0	0	31
32	00011111	32	0	0	0	0	1	1	32
33	00100000	33	0	0	0	1	0	1	33
34	00100001	34	0	0	1	0	0	1	34
35	00100010	35	0	0	1	1	0	0	35
36	00100011	36	0	1	0	0	0	0	36
37	00100100	37	0	1	0	1	0	0	37
38	00100101	38	0	1	1	0	0	0	38
39	00100110	39	0	1	1	1	0	0	39
40	00100111	40	1	0	0	0	0	0	40

LED status:
0 LED OFF
1 LED ON
L LED blinking

For the readers addressing, use keypad "1"

NESS
Innovative Electronic Solutions



Ness SmartLiving
Anti-intrusion control panels and security systems
Installation and programming guide



www.nesscorporation.com

National Customer Service Centre
Ph: 1300 551 991
customerservice@ness.com.au

