

How to set the Time and Date

Introduction


This technical note will show you how to change the time and date using either the keypad or the SmartLeague software.

Things to know before you begin


You must know a valid user code in the panel if you want to change the time & date using the keypad.

How to set time and date using the keypad

1. Press **OK**
2. Enter in your usercode (eg. 0001)
3. Press **OK** again
4. Press the down arrow to you get to **Set date/time** then press **OK**
5. Enter the hours in 24 hour time by pressing the up and down keys
6. Press the right arrow to move to the minutes and set the minutes
7. Press the right arrow to move to the day field and set the day of the month
8. Press the right arrow to move to the month field and set the month
9. Press the right arrow to move to the year field and set the year
10. Once the time and date is set, press the **OK** button.

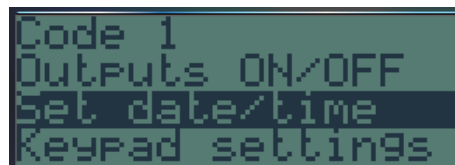


```
Code 1
Outputs ON/OFF
Set date/time
Keypad settings
```

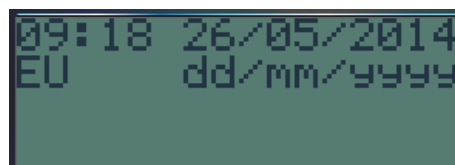


```
09:18 26/05/2014
EU      dd/mm/yyyy
```

How to set time and date using the SmartLeague software

1. Click on **SmartLiving System configuration** from the tree on the left.

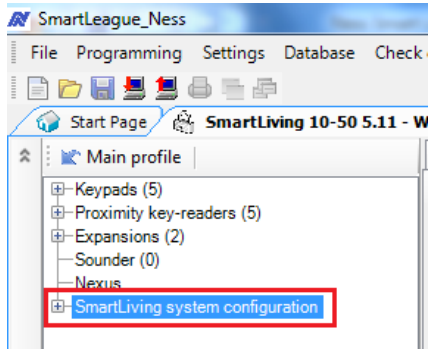

2. Find the time and date fields in the right panel.

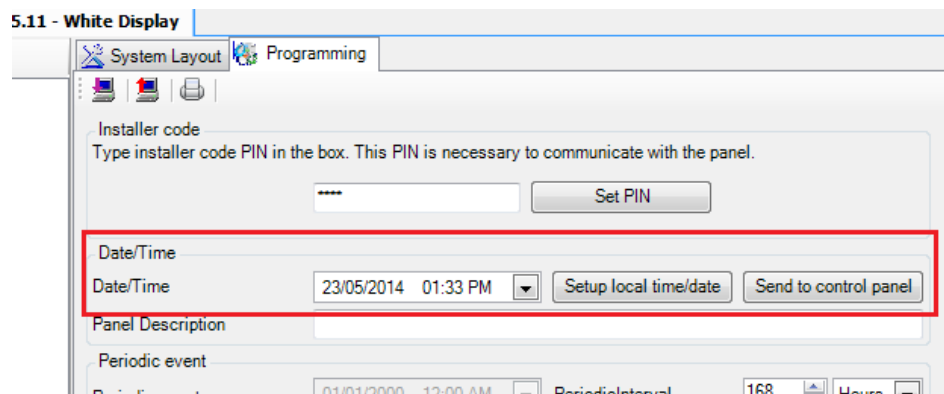

Setup local time/date button


This will set the time and date based on your computers time and date.

Download to control panel button

This will send the settings to the panel.

If you want to manually set the time and date, you can press the down arrow next to the time and date field and manually set the time and date.

Tip: To find out the current time and date that is in the panel press the upload from control panel button up the top of the panel.

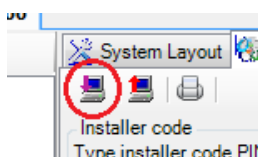

Additional Information:

Customer Service

Phone: 1300 551 991 (M-F 8:30am – 5:00pm)

Email: customerservice@ness.com.au

YouTube: www.youtube.com/nesscorporation