


Tech Notes

SCR RECEIVER to D8/D16

NESS D8/D16 MAIN BOARD

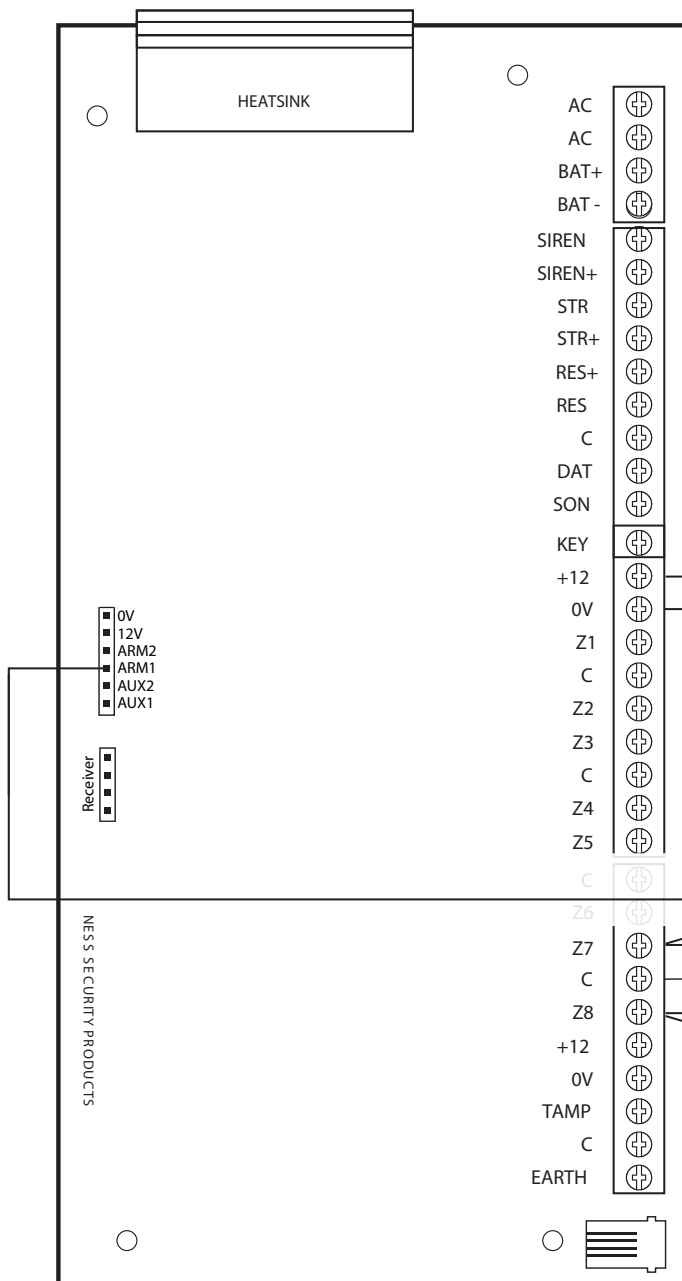



This diagram and programming instructions allows the use of Ness RK3 or RK4 Radio Keys to operate the Ness PRO-LD control panel. Radio Key functions are ON, OFF & Panic.

PROGRAMMING THE PRO-LD PANEL

(Installer Program Mode)

1. Enable option P60E 3E (enables keyswitch arming).
2. Enable option P64E 4E (enables keyswitch chirps).
3. Program your radio devices as per the receiver manual.
4. Enable option P52E 7E (enables zone 7 as 24hr for the Panic button).
4. On the SCR, set LK1 to the ON position for momentary operation.

100-187
NESS SCR RECEIVER

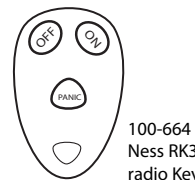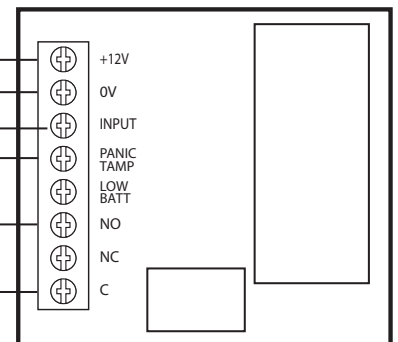

100-664
Ness RK3
radio Key



100-067
Ness RK4 radio Key.
(AUX button is compatible with the Ness 100-099 AUX Receiver or Ness D8/D16 panels via the Ness radio Interface).

www.ness.com.au

© 2003 Ness Security Products Pty Ltd ABN 28 069 984 372
Photographs are used for illustrative purposes only. Design and specifications may vary.



Security Products



SYDNEY
02 8825 9222

MELBOURNE
03 9875 6400

BRISBANE
07 3343 7744

PERTH
08 9328 2511

ADELAIDE (Aquavia)
08 8277 7255

NZ (NFS SECURITY)
+64 9 573 0401