

Shortcuts – How to Change a function key icon

Introduction


This technical note will show you how to edit or change a shortcut function key icon using the SmartLeague software.

Things to know before you begin


Ensure you have the SmartLeague software installed and talking to your panel as well as having a working keypad connected to your panel.

How to edit / change a function key icon

1. In the SmartLeague software, expand **Keypads** from the left menu tree.
2. Select the keypad you want to use.

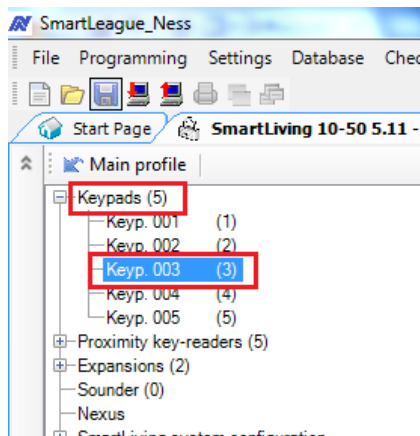

3. Expand the **Advanced** section in the right panel.

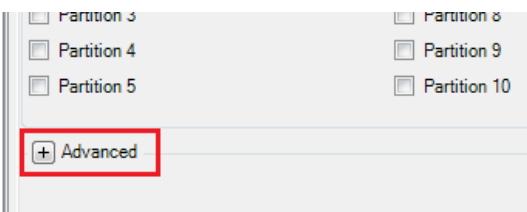

4. As you will noticed there are 12 F Keys. Each function key can have a different icon.

Advanced			
	Shortcuts	Shortcut parameter	Authorization requirements
F1	Arm/Disarm	Scenario 1	Code entry in the event security risk
F2	Arm/Disarm	Scenario 2	Code entry in the event security risk
F3	View Zone status	-	-
F4	Stop alarms	-	Requires code
F5	Zone bypass menu	-	Requires code
F6	View Events log	-	-
F7	Clear call queue	-	Requires code
F8	Reset alarm/tamper memory	-	Requires code
F9	Activations	-	Requires code
F10	View faults	-	-
F11	Date/Time setting	-	Requires code
F12	Arm/Disarm	Scenario 1	Code entry in the event security risk


5. In this example F1 has a locked padlock as it's going to arm the panel.

This icon can be changed based on what is set in the 'Shortcut parameter' from step 4 above.




6. To change the F1 icon, you will notice in the example in step 4 it is set as Scenario 1.


From the menu tree on the left in the SmartLeague software, expand the list and select **Arming Scenarios** and select the Scenario from the list. In this example we are going to select Scenario 1 since this is the scenario that is being used for F1.

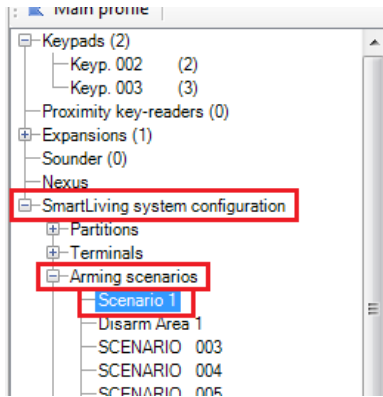

7. Select the **icon** drop down box to change the icon for the function button.

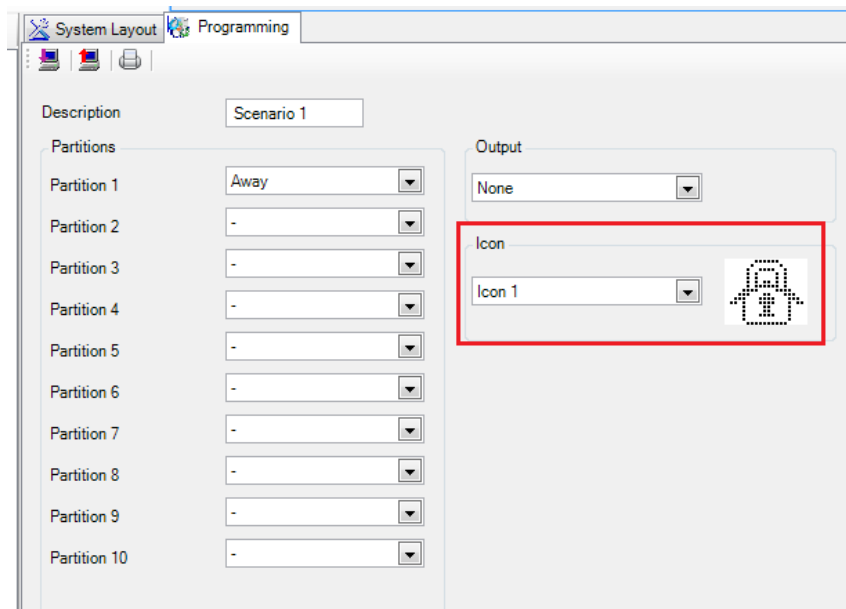

8. Once the icon has been changed, you need to send it to the panel.

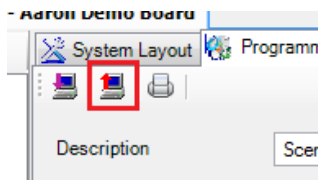

9. Once the data has been sent to the panel, it will reboot and the keypad will then display the new icon that you choose in step 7.

Additional Information:

Customer Service

Phone: 1300 551 991 (M-F 8:30am – 5:00pm)

Email: customerservice@ness.com.au

YouTube: www.youtube.com/nesscorporation