



# Tech Notes

## SCR RECEIVER to L8 PANEL

### NESS L8 MAIN BOARD

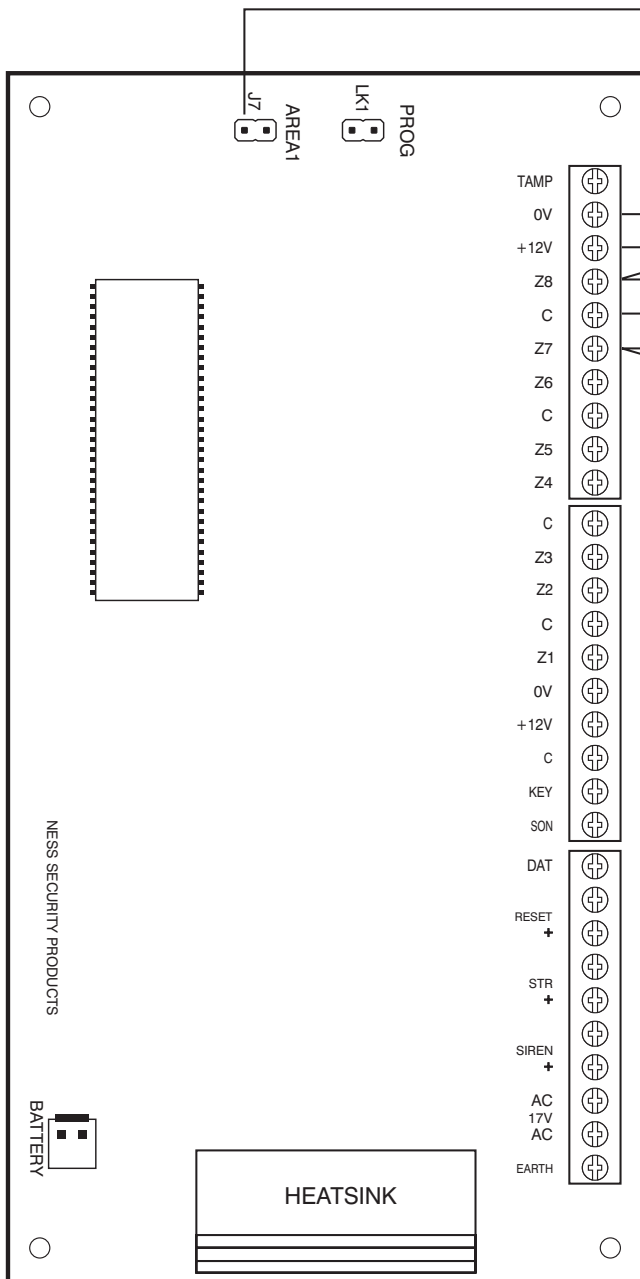

### 100-187 NESS SCR RECEIVER

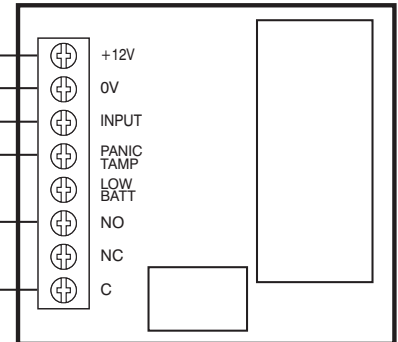


This diagram and programming instructions allows the use of Ness RK3 or RK4 Radio Keys to operate the Ness L8 control panel.

Radio Key functions are ON, OFF & Panic.

### PROGRAMMING THE L8 PANEL

(Installer Program Mode)

1. Enable option P60E 3E (enables keyswitch arming).
2. Enable option P64E 4E (enables keyswitch chirps).  
*Note that the L8 panel chirps the RESET output. The NOI240 screamer is recommended.*
3. Program your radio devices as per the receiver manual.
4. Enable option P52E 7E (enables zone 7 as 24hr for the Panic button).
5. On the SCR, set LK1 to the ON position for momentary operation.

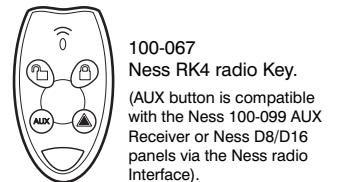

[www.ness.com.au](http://www.ness.com.au)

© 2003 Ness Security Products Pty Ltd ABN 28 069 984 372  
Photographs are used for illustrative purposes only. Design and specifications may vary.



Security Products



**SYDNEY**  
02 8825 9222

**MELBOURNE**  
03 9875 6400

**BRISBANE**  
07 3343 7744

**PERTH**  
08 9328 2511

**ADELAIDE (Aquavia)**  
08 8277 7255

**NZ (NFS SECURITY)**  
+64 9 573 0401