


# Tech Notes

## SCR RECEIVER to PRO-LD PANEL

### NESS PRO-LD MAIN BOARD

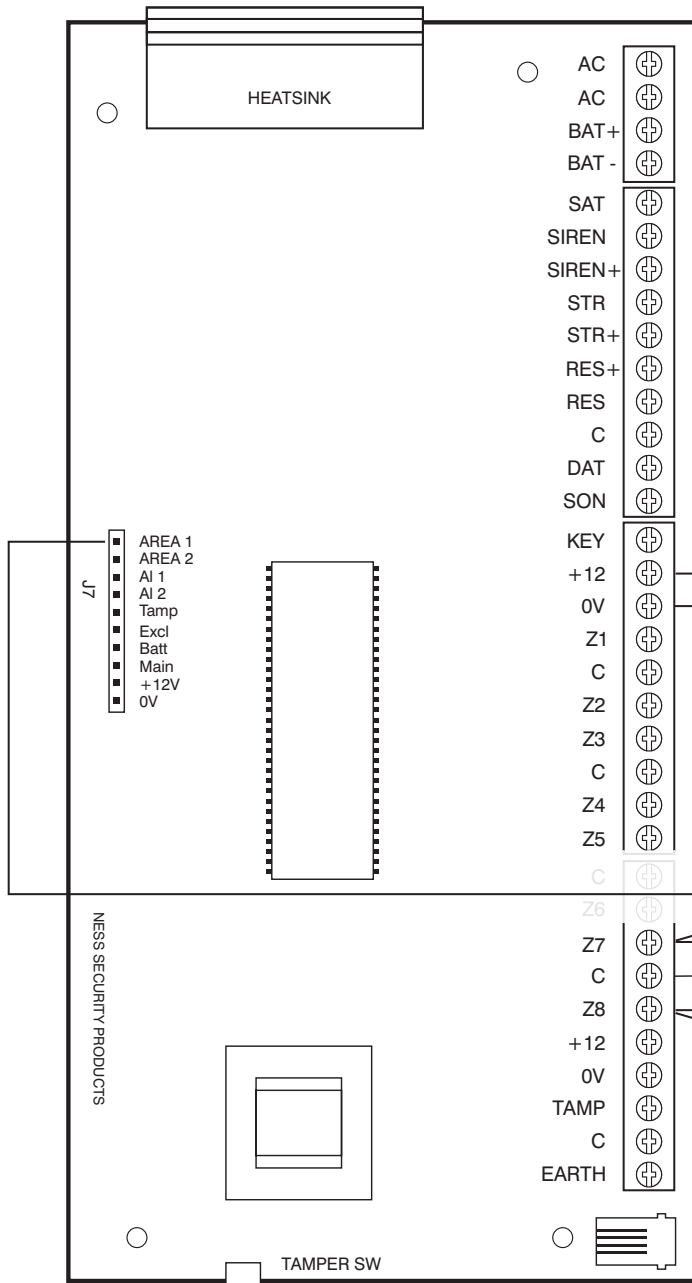


This diagram and programming instructions allows the use of Ness RK3 or RK4 Radio Keys to operate the Ness PRO-LD control panel. Radio Key functions are ON, OFF & Panic.

### PROGRAMMING THE PRO-LD PANEL

(Installer Program Mode)

1. Enable option P60E 3E (enables keyswitch arming).
2. Enable option P64E 4E (enables keyswitch chirps).
3. Program your radio devices as per the receiver manual.
4. Enable option P52E 7E (enables zone 7 as 24hr for the Panic button).
4. On the SCR, set LK1 to the ON position for momentary operation.

### 100-187 NESS SCR RECEIVER

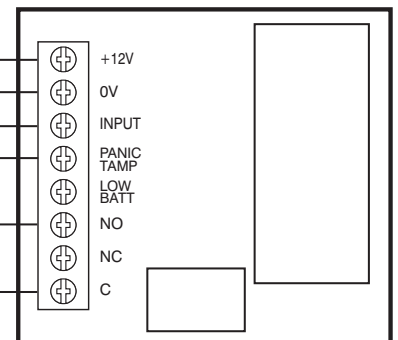

[www.ness.com.au](http://www.ness.com.au)

© 2003 Ness Security Products Pty Ltd ABN 28 069 984 372  
Photographs are used for illustrative purposes only. Design and specifications may vary.



Security Products



SYDNEY  
02 8825 9222

MELBOURNE  
03 9875 6400

BRISBANE  
07 3343 7744

PERTH  
08 9328 2511

ADELAIDE (Aquavia)  
08 8277 7255

NZ (NFS SECURITY)  
+64 9 573 0401