


Changing the Unlocking Password

This guide assumes that the door station and indoor monitors have already been added to the iVMS software and the door station can call the indoor monitors. A different unlocking password is configurable for each room in the apartment system.

To change the unlocking password follow the steps below:

1. Select the indoor station you want to change the unlocking password on then click on remote configuration

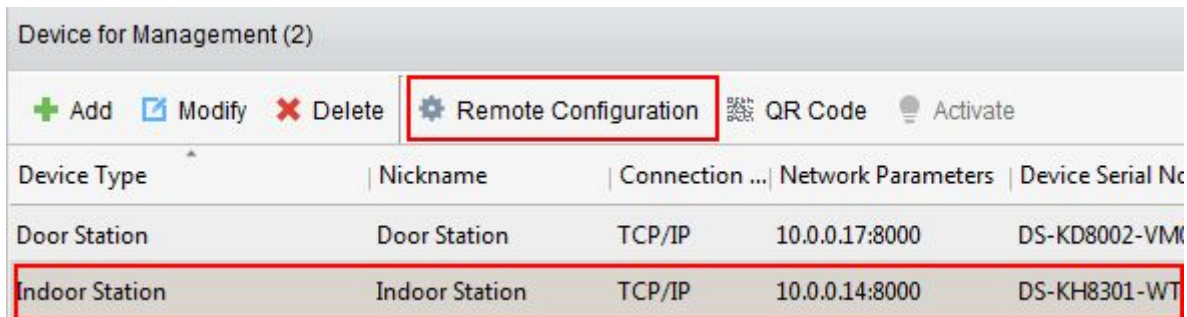

Device for Management (2)				
+ Add ↗ Modify ✖ Delete ⚙ Remote Configuration 📄 QR Code 💡 Activate				
Device Type	Nickname	Connection ...	Network Parameters	Device Serial No
Door Station	Door Station	TCP/IP	10.0.0.17:8000	DS-KD8002-VM
Indoor Station	Indoor Station	TCP/IP	10.0.0.14:8000	DS-KH8301-WT

2. Select Intercom, Permission Password, then select password type as “Unlocking Password. Enter current password (default is 123456) then enter the new password and then confirm the password.



System

Intercom

ID Configuration

Time Parameters

Permission Password

Zone Alarm

IP Camera Information

Volume Input/Output

Ring Import

Configuring the Right and Password Parameters

Permission Password

Password Type: Unlocking Password

Old Password:

New Password:

Confirm Password:

Save

Once the password has been changed, you can make sure it works by following the steps below:

1. Enter the # key and the Room No.
2. Enter the password and the # key.

For example, to unlock the door with room number 1's default unlocking password, you would press #1123456 #