


How to Get Verification Code from IP camera


Method 1: Go to device label on the back of the device and check the verification code like ABCDEF, see picture 1.

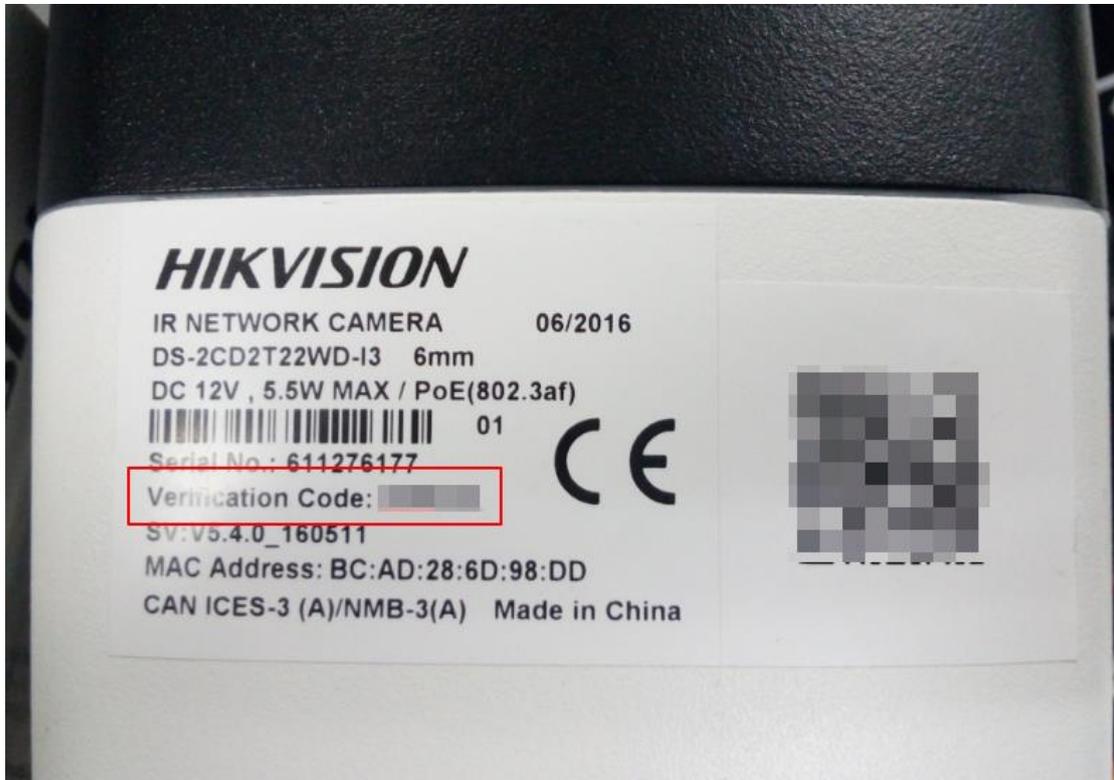

Picture 1

Method 2: Check the verification code via web or iVMS 4200

1. Log in the device via web browser or add the device via 4200
2. Go to Configuration → Network → Advanced Settings → Platform
3. Click the eye icon and get the verification code, see picture 2.

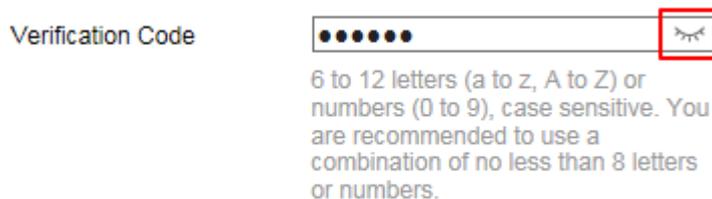


Picture 2

Method 3: Get the verification code via secureCRT.


Step 1: Enable SSH of IPC via Device Network SDK demo

1. Add the camera to ClientDemo tool. Input IP address, port number and password and click add, see picture 3.

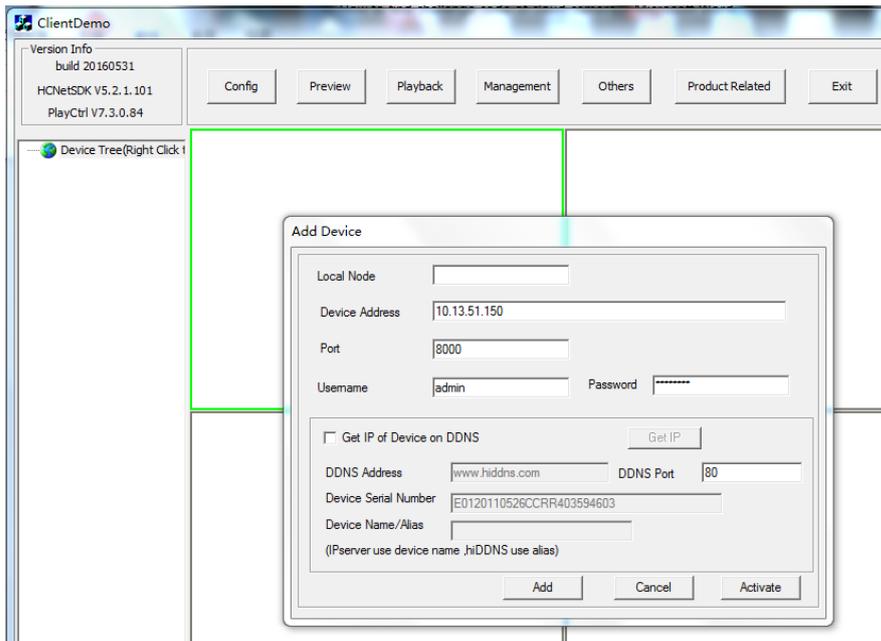

Picture 3


2. Choose the camera and find the path: Product Related->IPC/IPD CFG->Device Server->SSH. Choose Disable(there's logic issue here in the tool), and click Set to save the setting, see picture 4.

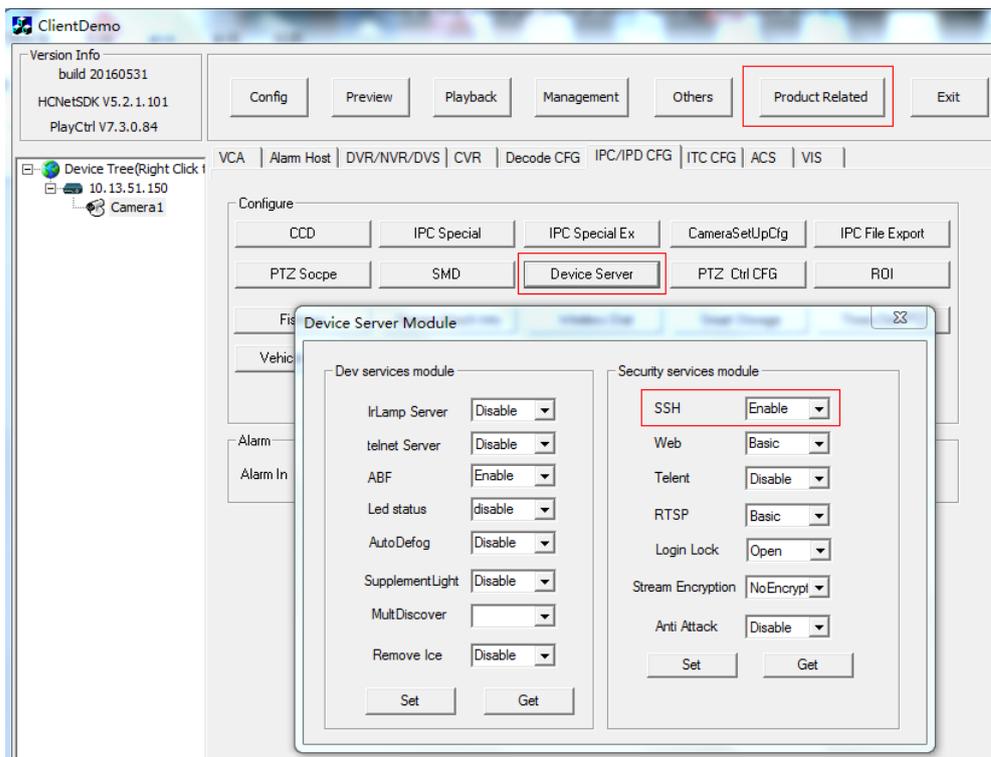

Picture 4

Step 2: login the device via secureCRT tool in SSH.

1. Click quick connect
2. Input device IP and username and click Connect, see picture 5.

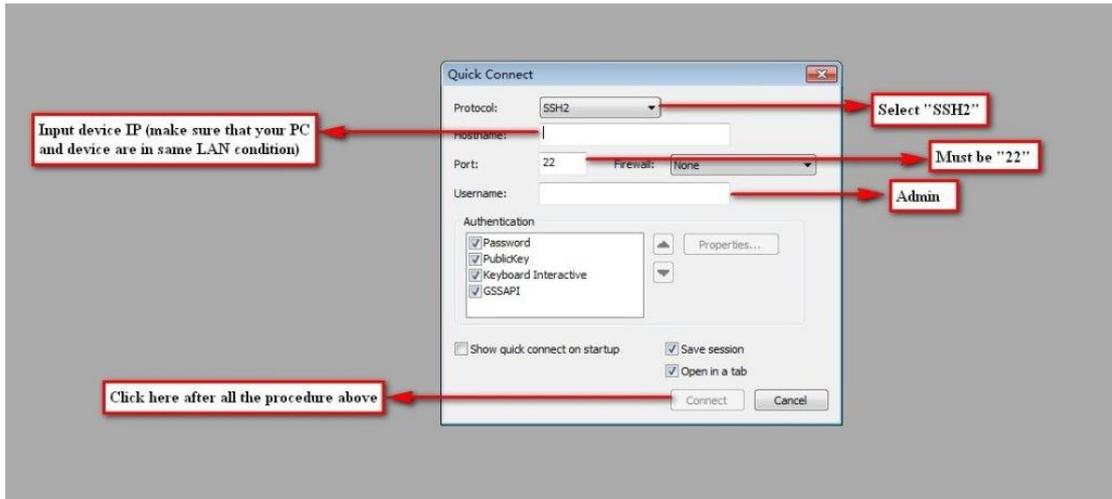


Picture 5

3. Click “Accept Once” or “Accept& Save” and input the device password, see picture 6.



Picture 6

4. Input “showKey” and press “Enter” button, the Permanent code is the verification code for the device, see picture 7.

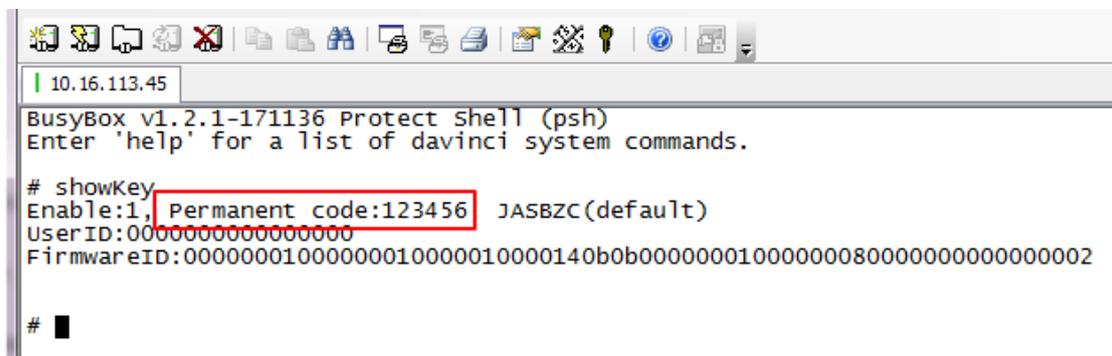

Picture 7